



PLUG-IN POWER SUPPLIES, ≤28v

ALL ACOPIAN
POWER SUPPLIES
MADE IN U.S.A.

INSTALLATION AND OPERATION

These Acopian Plug-in power supplies plug into standard 8-pin octal sockets (order accessory Socket SL608). As an option, they can alternately be provided with solder terminal connections. Four mounting holes (6-32) are provided in the base for fastening the module when used in other than the upright position, or if extreme vibration will be encountered.

Even a relatively small amount of air flowing around and through a power supply will significantly reduce the rise in its temperature resulting from operation, and therefore the temperature of the critical components within it, improving both reliability and stability. Avoid blocking air flow through perforated surfaces. Allow free air to circulate around heat sinks. Space at least one inch away from surrounding objects.

Make all connections before applying AC input power.

For models with the Remote Voltage Sensing Option (model number with "R" prefix):

THE SENSING TERMINALS (PINS) MUST BE CONNECTED to the output terminals, either at the power supply socket or at the load. Failure to have the sense terminals connected will affect the output voltage (usually causing it to be higher than the rating of the supply, and unadjustable), and may result in permanent damage to both the power supply and its load. If voltage drops in the output voltage leads (which degrade regulation) are not objectionable, local sensing can be used. However, if the best possible regulation at the load is required, then connect the sense terminals to the output leads as closely as possible to the load, as shown in the schematic. This configuration permits the power supply to sense and compensate the voltage actually across the load. Note that remote sensing is capable of compensating only limited wiring drops. The voltage across the load, plus the voltage drops through the wiring, must be within the output voltage range of the supply for the voltage at the load to remain within the load regulation specification.



If there is any possibility of voltage from another source (another power supply, a battery, transients, etc) being applied to the power supply's output terminals, protect the power supply by using a diode in series with one of the output leads.

Do not attempt to directly parallel the outputs of two power supplies. This would result in current flowing from the higher-set output into the lower-set output, and probable damage to both circuits. Outputs may be connected in series to obtain a higher voltage provided that a reverse-biased diode, having PIV and current ratings exceeding the combined output, is used across each output; however, keep in mind that the output current to be drawn cannot exceed the output current rating of the lowest rated supply used.

Frequent fuse failure is symptomatic of power supply overload, a short circuited output, a tripped overvoltage protector, or power supply failure. Do not overfuse; this can result in damage to the power supply.

If the AC input power contains large voltage spikes ('noise') induced by the switching of high currents, inductive loads, electro-mechanical components, etc., the input power leads to the supply should include some means of transient suppression. Otherwise, a portion of the noise may be coupled through the supply to the load. Also, the supply could be damaged. The means of suppression that is easiest to install is a 1 mfd. capacitor or a metal oxide surge suppressor (MOV) across the AC input terminals of the supply. In extremely severe cases, the use of RF chokes in series with each side of the line may also be required.

These power supplies operate as constant voltage sources when used at load current equal to or less than their ratings. If the power supply is overloaded, the current limit circuit will automatically reduce the output voltage, and it will then attempt to recover to its normal operating point. Therefore, A TRANSITORY OVERLOAD RESULTS IN A MOMENTARY DROP IN OUTPUT VOLTAGE. However, if the overload is still present when the voltage attempts to recover, the voltage will continue to alternately drop and recover, which will appear as a sawtooth oscillation of the output. Do not operate the power supply in this mode; reduce the load so that an output current equal to or less than the rating of the supply will be drawn.

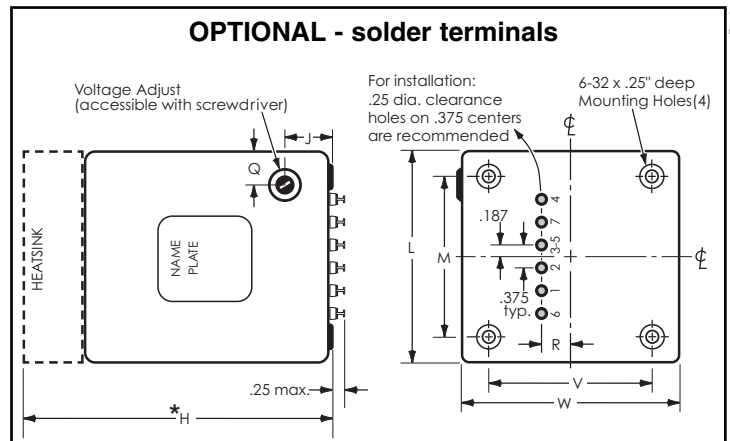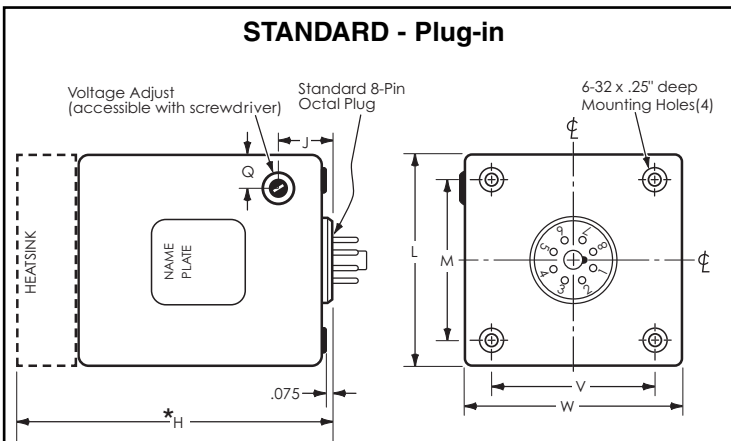

*H dimension includes HEATSINK on BS, US, WS, and HS case sizes.

*H dimension includes HEATSINK on BSL, USL, WSL, and HSL case sizes.

Case Size	L	W	H*	M	V	J	Q	Approx. Weight
AS	3.40	3.28	4.67	2.625	2.625	1.00	.66	2 lb. 8 oz.
BS	3.40	3.28	5.33	2.625	2.625	1.00	.66	2 lb. 14 oz.
TS	3.33	4.15	4.85	2.562	2.750	1.12	.62	3 lb. 6 oz.
US	3.33	4.15	5.53	2.562	2.750	1.12	.62	3 lb. 8 oz.
WS	3.40	5.02	5.53	2.562	3.562	1.12	.62	4 lb. 14 oz.
HS	3.40	5.02	6.65	2.562	3.562	1.12	.62	5 lb.

Case Size	L	W	H*	M	V	J	Q	R	Approx. Weight
ASL	3.40	3.28	4.60	2.625	2.625	.93	.66	.34	2 lb. 8 oz.
BSL	3.40	3.28	5.26	2.625	2.625	.93	.66	.34	2 lb. 14 oz.
TSL	3.33	4.15	4.78	2.562	2.750	1.05	.62	.75	3 lb. 6 oz.
USL	3.33	4.15	5.47	2.562	2.750	1.05	.62	.75	3 lb. 8 oz.
WSL	3.40	5.02	5.47	2.562	3.562	1.05	.62	1.37	4 lb. 14 oz.
HSL	3.40	5.02	6.58	2.562	3.562	1.05	.62	1.37	5 lb.






PLUG-IN POWER SUPPLIES, ≤28v

Acopian Plug-in power supplies are ideally suited to all applications where compact, high performance and high reliability power supplies are required. Octal plug interconnections provide mounting and wiring convenience and flexibility. All models have floating outputs which may be used floating, with either the positive or negative side grounded, and/or in series with other supply(ies). Provision for remote sensing of output voltage at the load is available as an option, for applications where voltage regulation is critical. The supplies are conservatively rated for operation at ambient temperatures to +65°C.

- (A) Dotted line connection required when C8 and K8 are omitted.
- (B) Dotted line connection required when K3 and K4 are omitted.

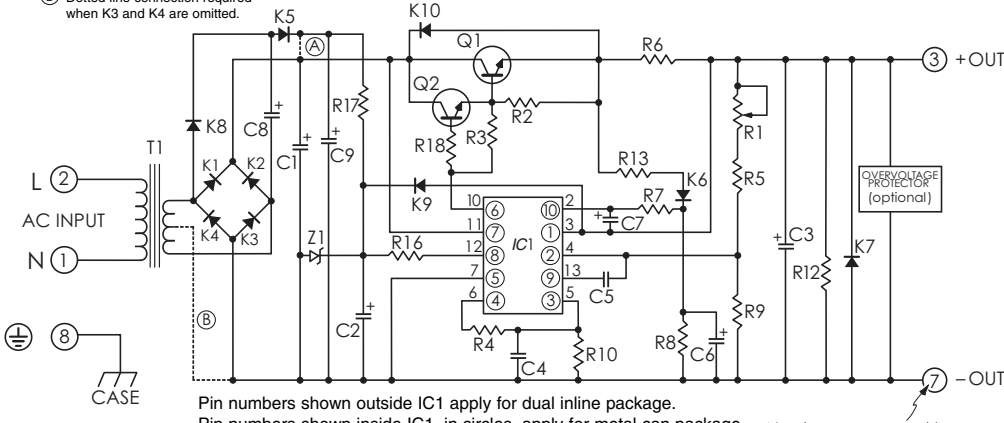


Pin numbers shown outside IC1 apply for dual in-line package.
 Pin numbers shown inside IC1, in circles, apply for metal can package.

Numbers correspond to plug pins on Plug-in models, or terminals on Solder Terminal models.

105-125 VAC, 50-400Hz (Standard)
 210-250 VAC, 50-400Hz (When model number ends in -230)


The MODEL NUMBER indicates any included options;
 prefix E: remote voltage adjustment
 prefix MIL-: MIL TESTED
 prefix R: remote sensing
 prefix V: overvoltage protection
 suffix F: fungus proofing
 suffix L: solder terminals
 suffix -230: 230v input

Output Connections when Remote Sensing Option is included:

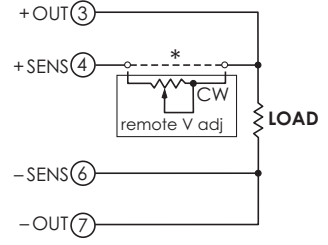

* THE DOTTED LINE CONNECTION IS REQUIRED, unless remote voltage adjustment is used. If using remote adjustment, the built-in adjustment must be turned fully CCW and the remote pot should have a value of 5K (0.5w).

Output Connections when Remote Adjustment Option is included:

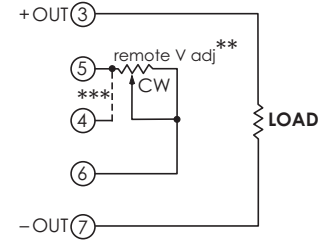

** When using the (optional) Remote Voltage Adjustment, the built-in adjustment must be turned fully CCW and the remote pot should have a value of 5K (0.5w).

***The dotted line connection is required when using built-in adjustment.

CAUTION: To provide protection from risk of fire, use a amp time-delay fuse (250V) in the AC input wiring.

MODEL: